HOME
DECORATORS
C O L L E C T I O N

HDC# 10487 MFG# TW-18687CC / TW-18687BK
ESSEX CONSOLE TABLE W/OPEN STORAGE 3-DRAWER

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

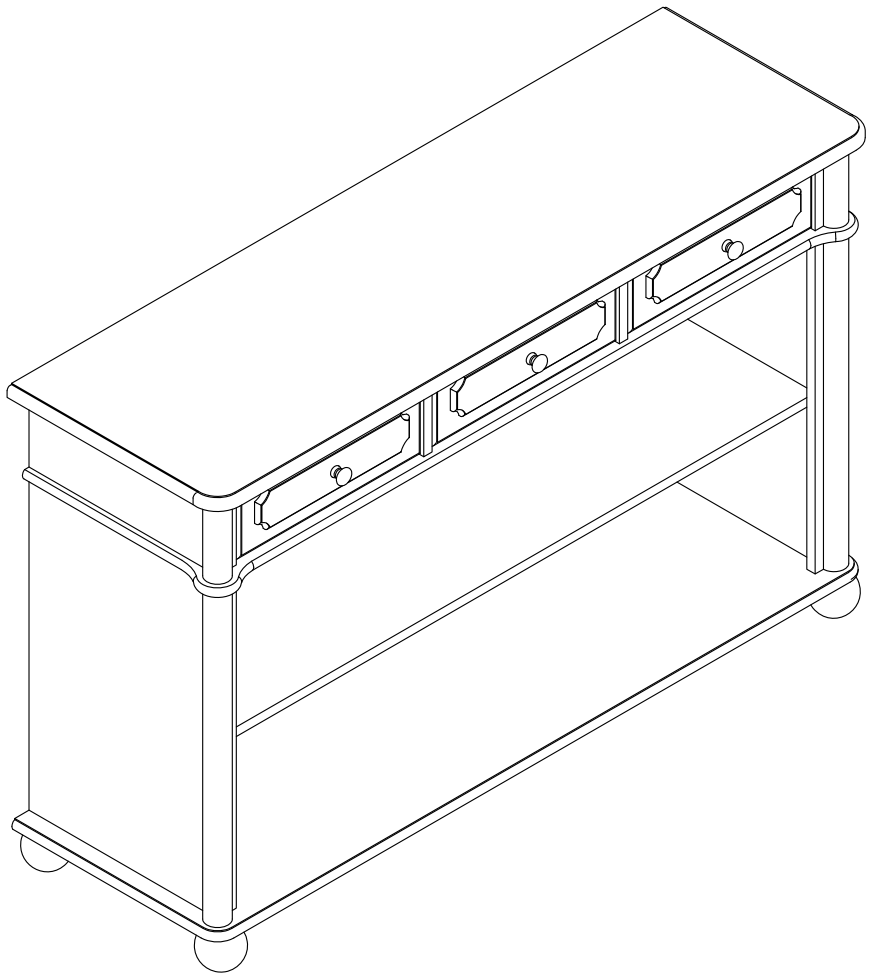

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTION LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

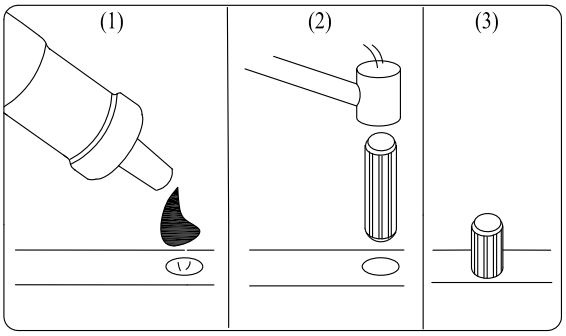

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PART ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF PART NEED.

IMPORTANT NOTE: FOLLOW INSTRUCTIONS LISTED BELOW IN PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

HARDWARE LIST

ROUND HEAD BOLT FLAT WASHER SPRING WASHER 4 SETS  Ø6x32mm (1)	ROUND HEAD BOLT HORIZONTAL HOLE NUT 4 SETS Ø6x50mm (2)	SHELF HOLDER FLAT HEAD SCREW 4 SETS  Ø3x12mm (3)	ROUND HEAD SCREW 17 PCS Ø3x14mm (4)
WOOD DOWEL 4 PCS  (5)	ALLEN KEY 1 PC  (6)	GLUE 1 PC  (7)	HANDLE BOLT 3 SETS  (8)
TILTING PREVENT HARDWARE 2 SETS Ø3x16mm Ø8x32mm (9)			

PARTS LIST

TOP FRAME 1 PC 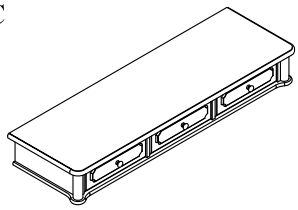 A	LEFT SIDE PANEL 1 PC  B	RIGHT SIDE PANEL 1 PC  C
BOTTOM PANEL 1 PC 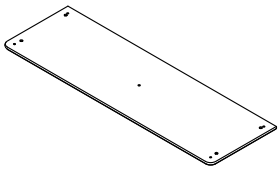 D	SHELF 1 PC 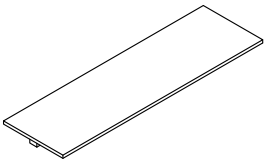 E	LEG 4 PCS F
LEG 1 PC G	BACK PANEL 1 PC 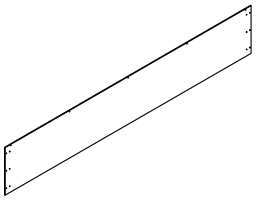 H	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE BOTTOM PANEL (D) AND SIDE PANEL (B & C)

- USE ROUND HEAD BOLT AND HORIZONTAL HOLE NUT (2) TO ASSEMBLE BOTTOM PANEL (D) AND SIDE PANEL (B & C) TOGETHER BY ALLEN KEY (6) AS SHOWN.

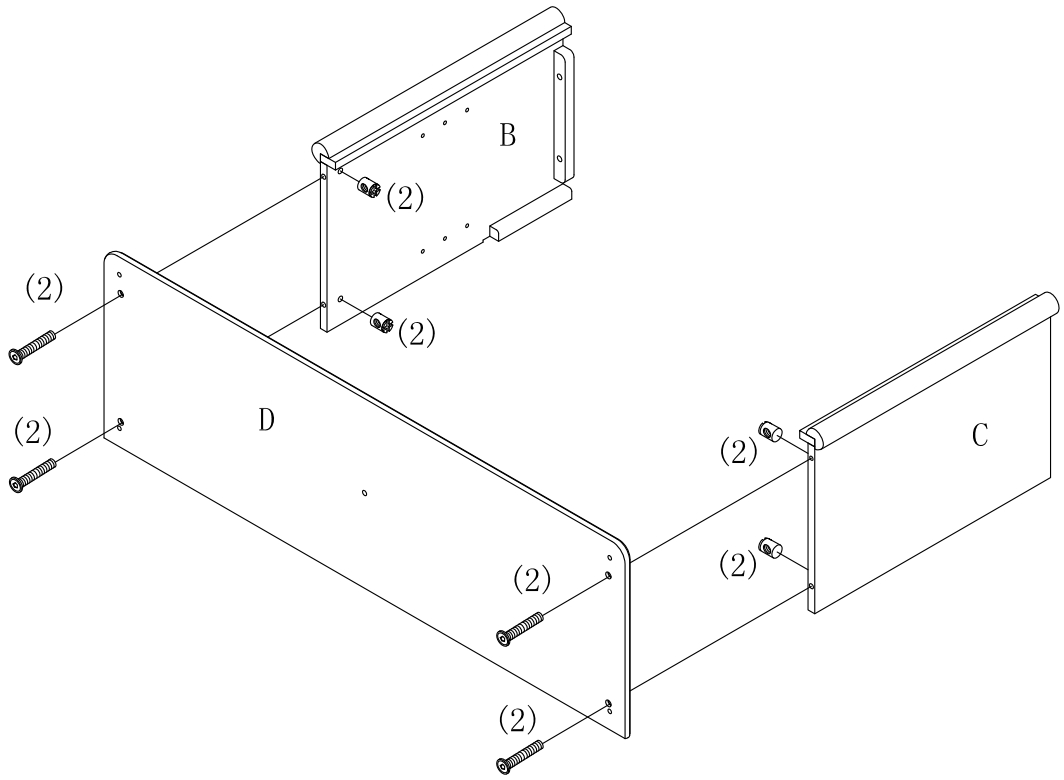

STEP 2: ASSEMBLE LEG (F & G)

- ROTATE LEG (F & G) ONTO BOTTOM PANEL (D) TIGHTLY.

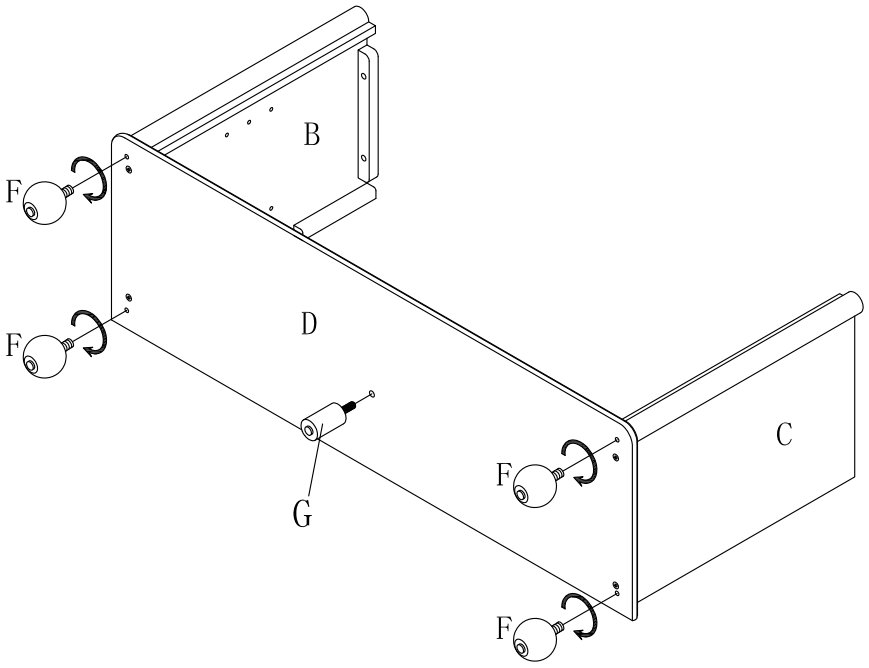

STEP 3: ASSEMBLE TOP FRAME (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (5) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, SPRING WASHER AND FLAT WASHER (1) TO ASSEMBLE SIDE PANEL (B & C) AND TOP FRAME (A) TOGETHER BY ALLEN KEY (6) AS SHOWN.

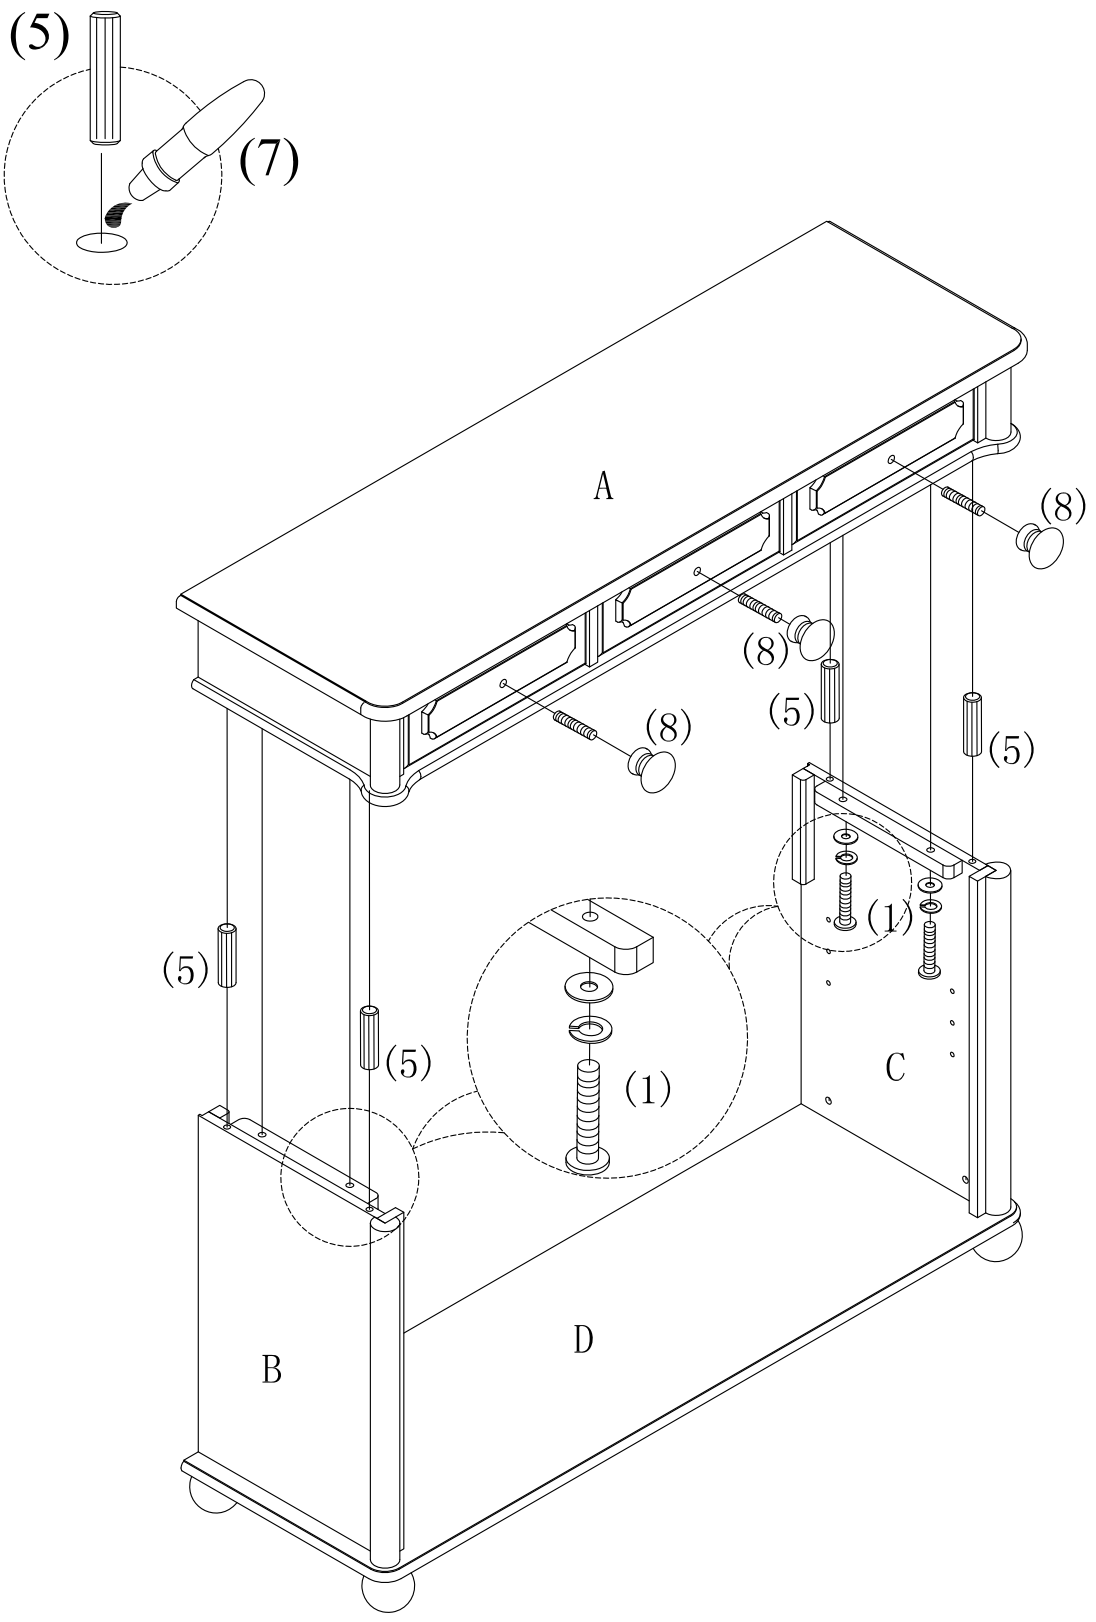

STEP 4: ASSEMBLE SHELF (E)

• INSERT SHELF HOLDERS (3) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL(B & C), THEN USE FLAT HEAD SCREW (3) TO FIX SHELF (E) AND SHELF HOLDER (3).

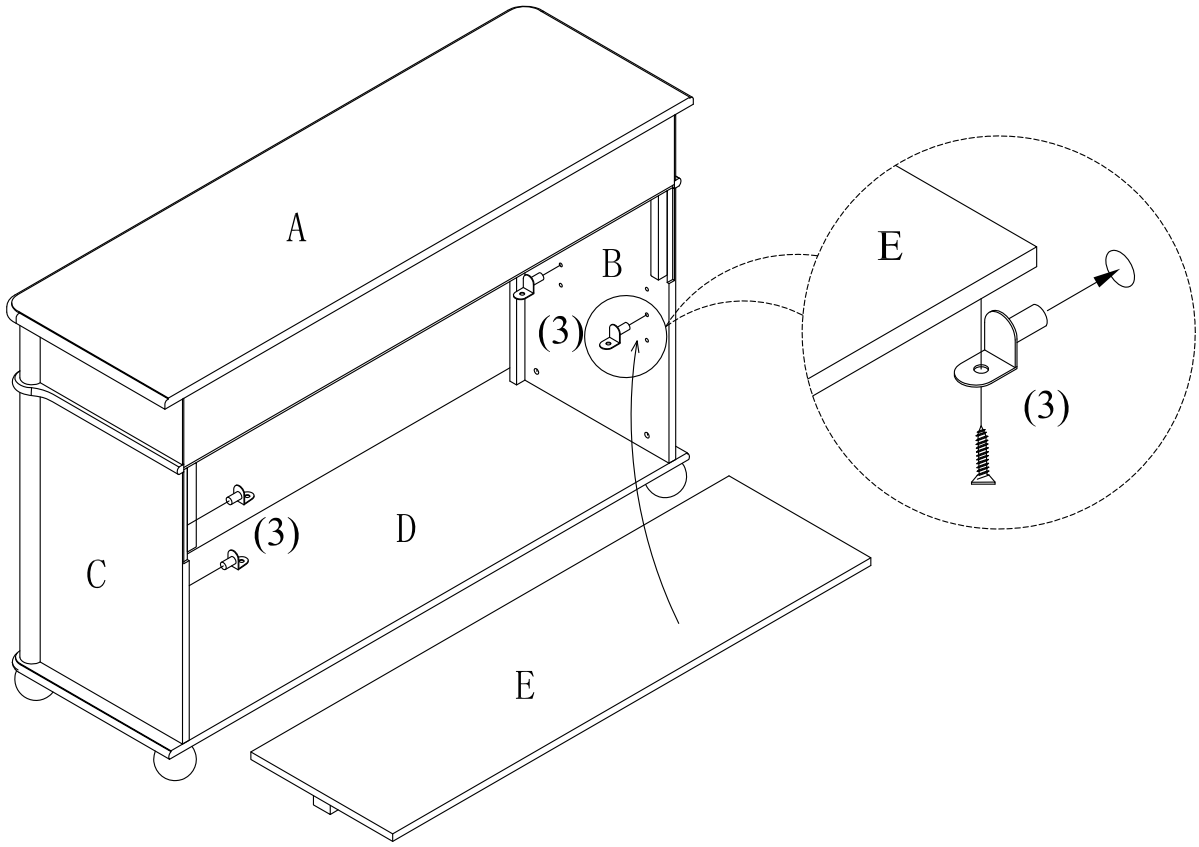

STEP 5: ASSEMBLE BACK PANEL (H)

• USE ROUND HEAD SCREW (4) TO ATTACH BACK PANEL (H) ON THE BACK OF PRE-ASSEMBLED UNIT.

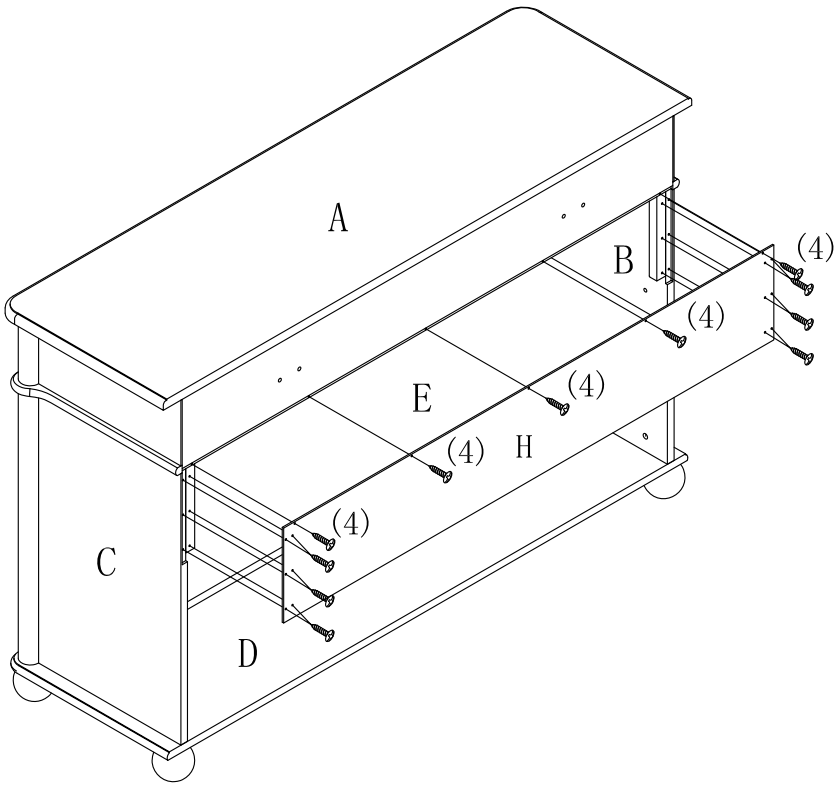

STEP 6: ASSEMBLE PREVENT DEVICE (9)

- USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT 2 GECKOS INTO THE 2 HOLES BY RUBBER MALLET, USE TWO LONG SCREWS TO ATTACH ONE METAL SLICE ONTO WALL. THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER METAL SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT.
- USE PLASTIC ROPE TO LINK THE PRODUCT AND WALL TOGETHER AS SHOWN.

WARNING: THE TILTING PREVENT HARDWARE MUST BE USED AS A PART OF ASSEMBLY, OTHERWISE, TILTING DANGER MAY BE CAUSED.